


ASSEMBLY AND INSTRUCTION MANUAL

MODEL OD2216 FROGswing

© 2022 KURT BEIER & KATI QUINGER



Fig. OD FROGswing with sun canopy (Ecru)

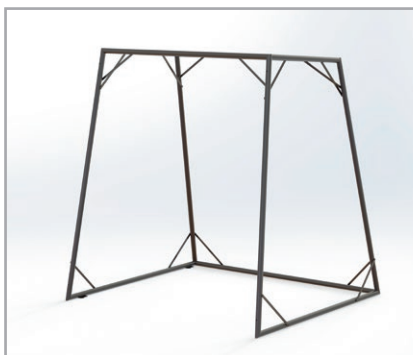

Rocking frame: matt black fine structure powder-coated



Rocking frame: fig. with sun canopy and weather protection (Ecru), opened



Rocking frame: fig. with sun canopy and weather protection (Ecru), closed



Assembly instructions, rocking frame OD FROGswing:

ATTENTION! To ensure secure assembly, please observe the individual steps of instruction!
The frame should always be mounted in pairs (2 persons)!



1. Unpack the individual parts of the rocking frame, place them in front of you and check the packaging for completeness.

Scope of delivery:

- 1 x Roof frame (1)
- 1 x Base frame (2)
- 1 x Strut front left (3)
- 1 x Strut front right (4)
- 1 x Strut back left (5)
- 1 x Strut back right (6)
- 14 x Stiffening (7)
- 16 x Oval-head screw (8)
- ⊕ 28 x Oval-head screw (9)

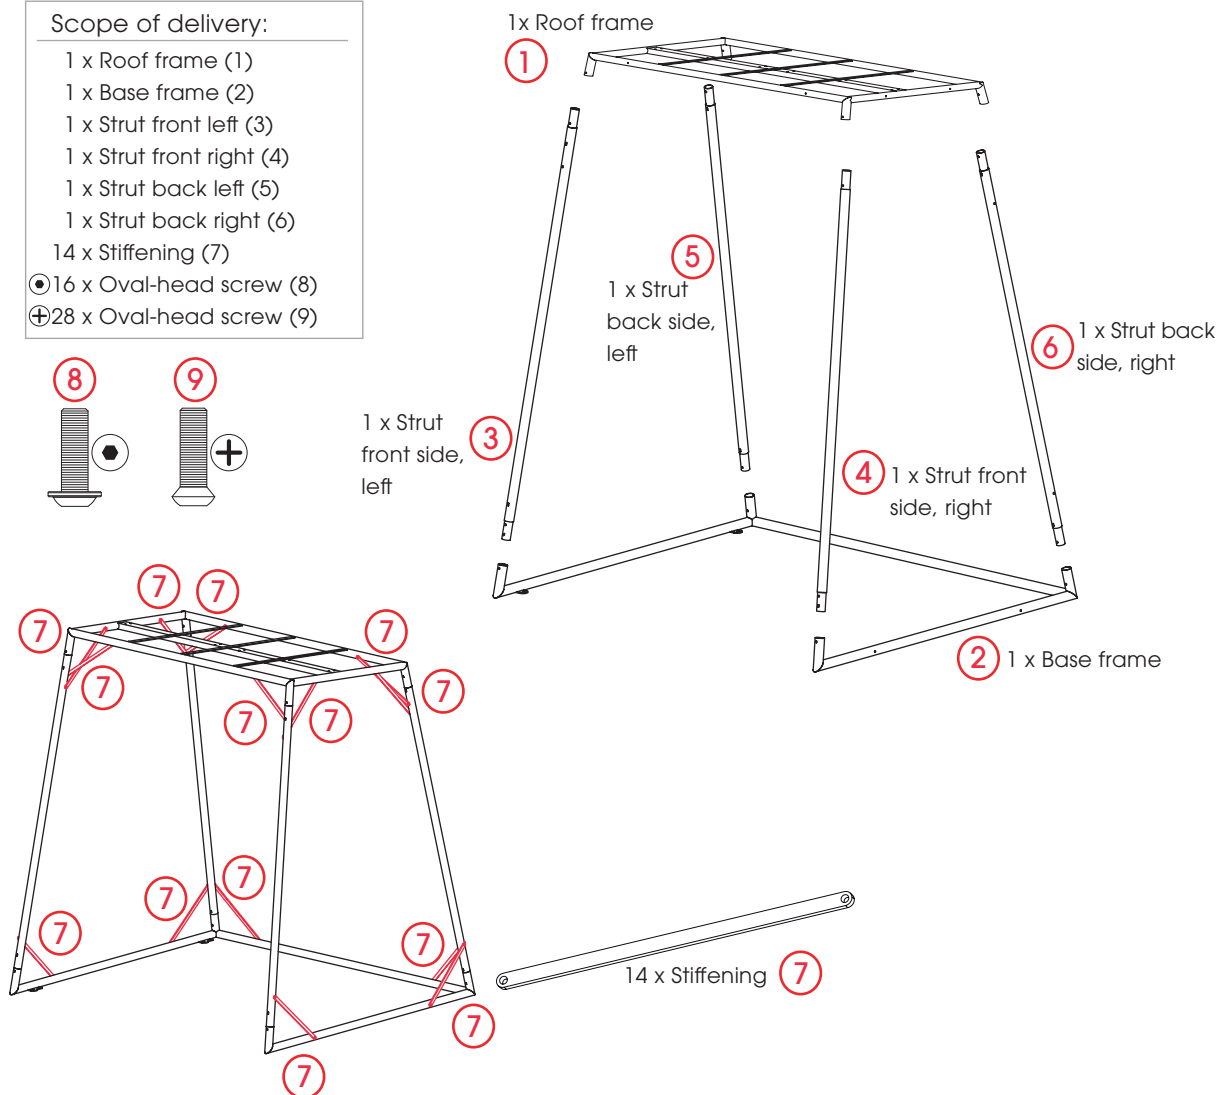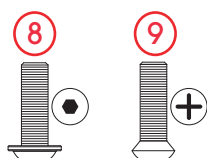

Views, ready-mounted frame:

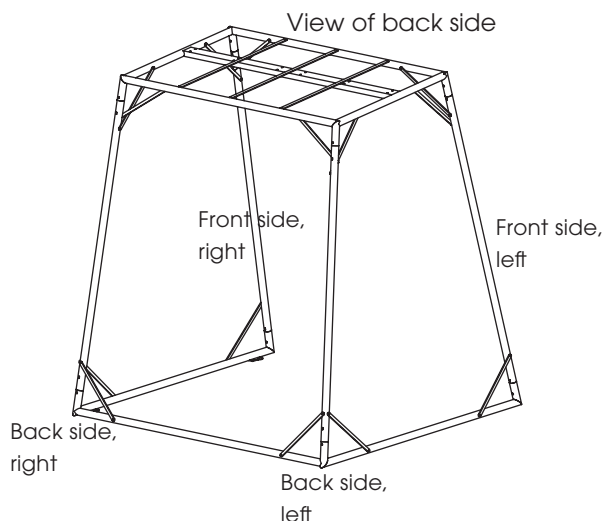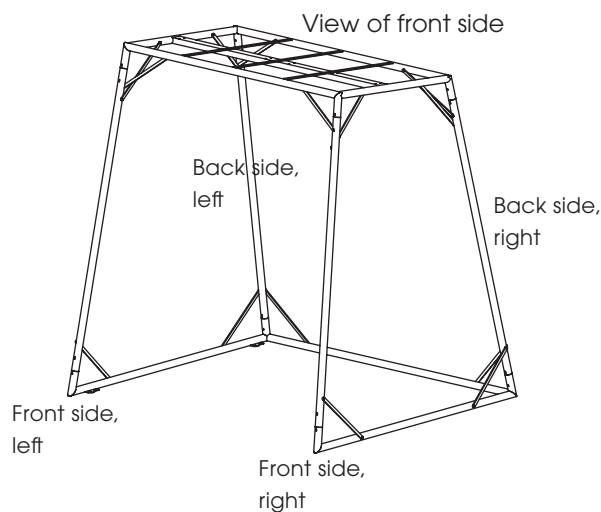

2. Insert the struts into the respective mounting brackets on the base frame. Pay attention to the marking (see fig. 1 & 2).

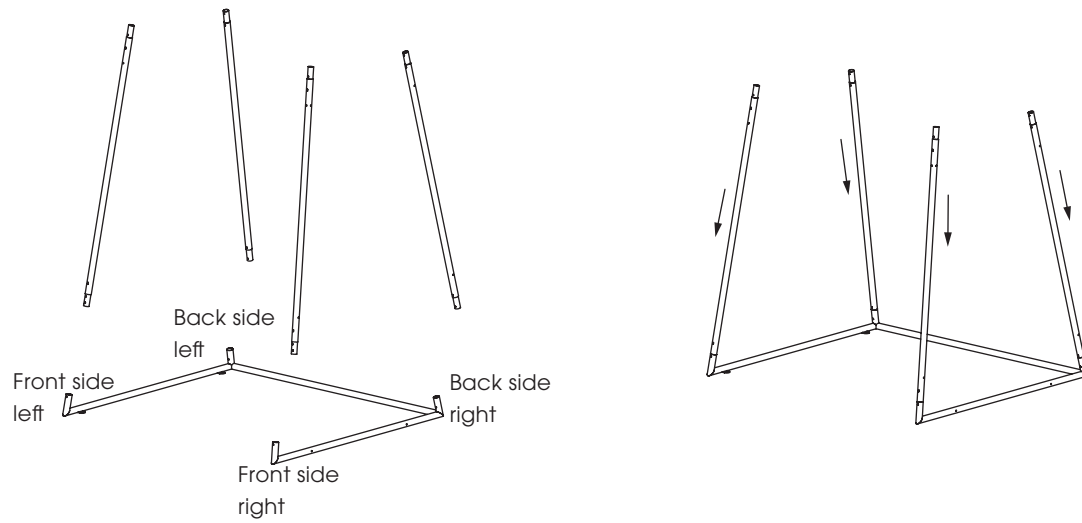


Fig. 1




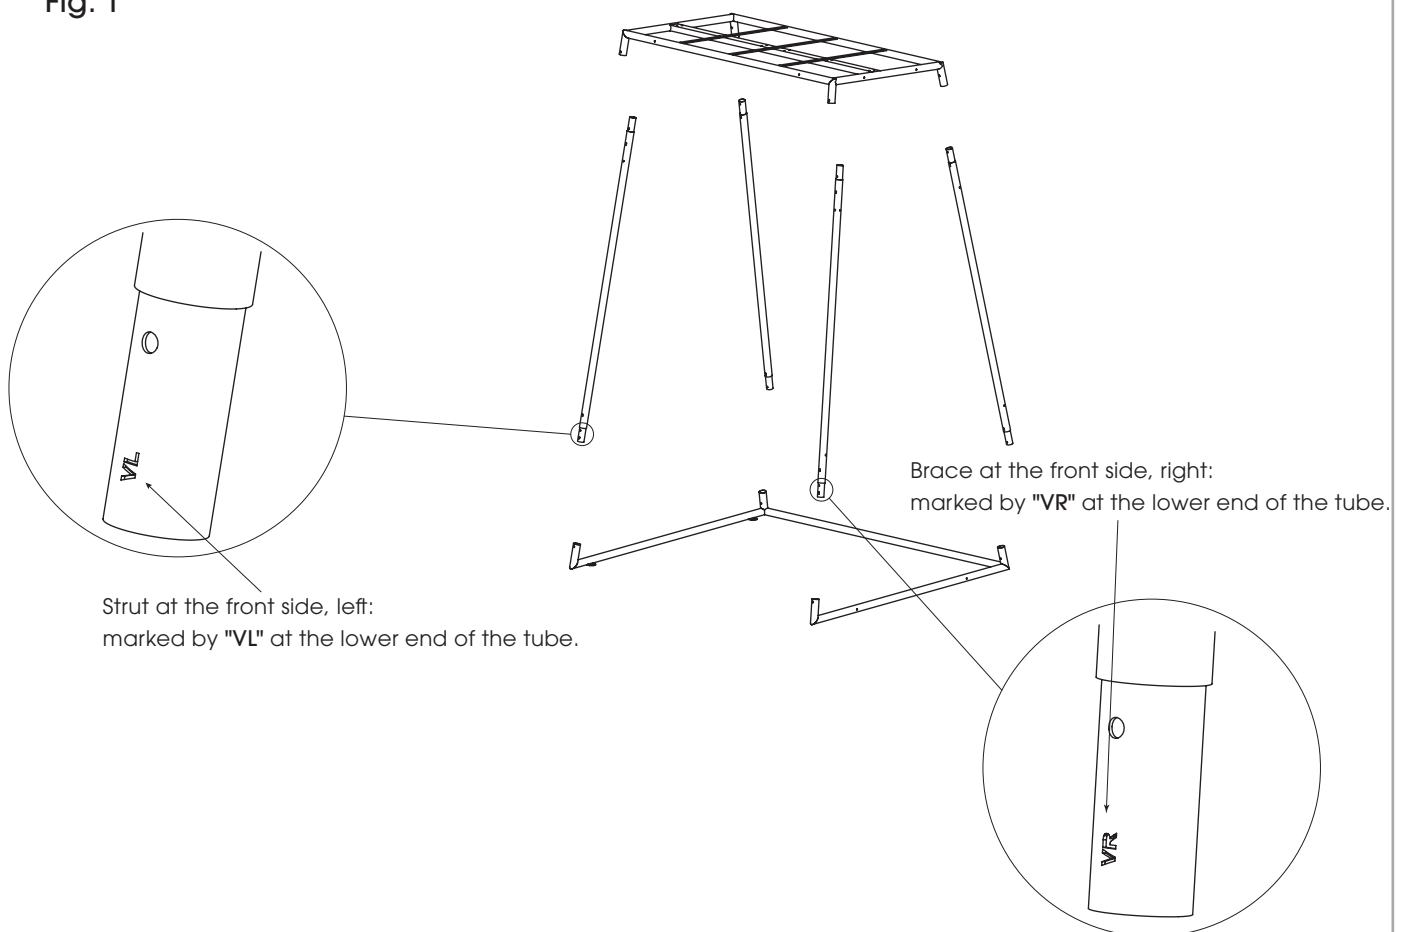


Fig. 2

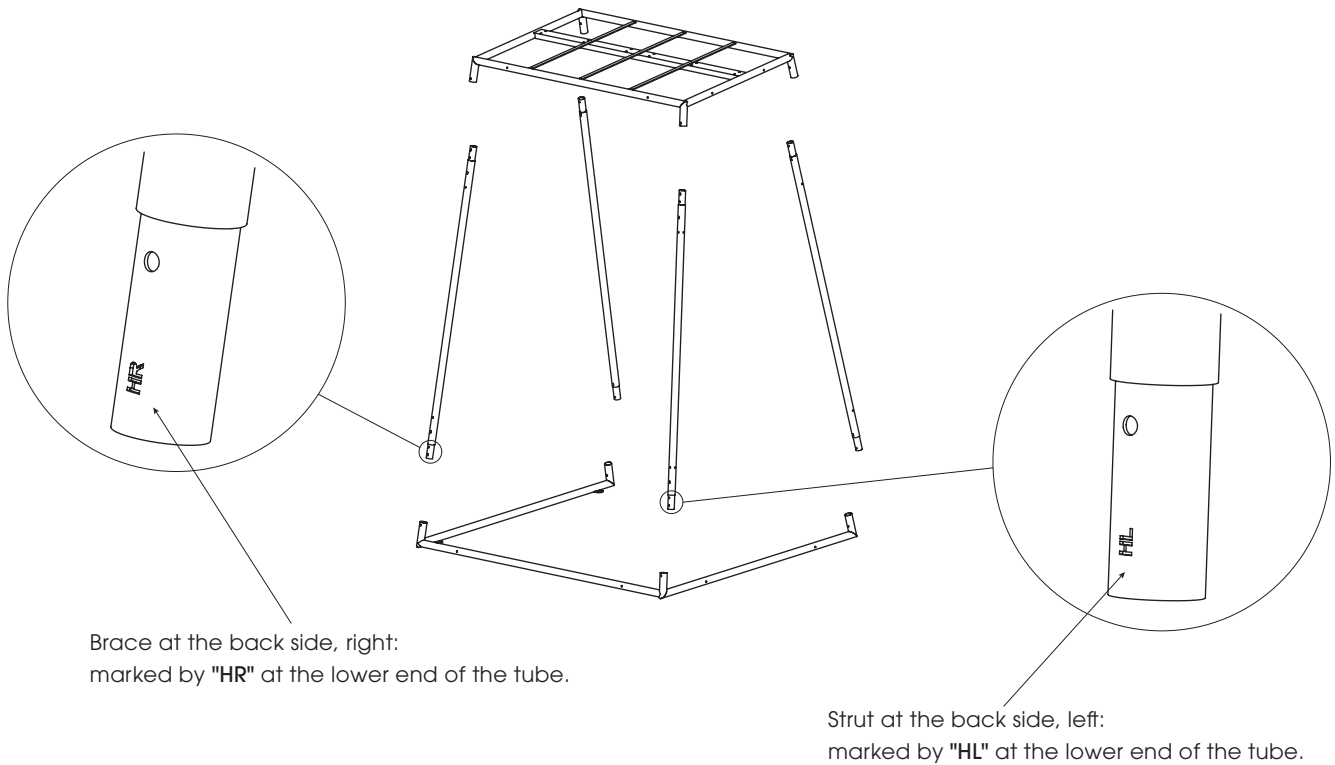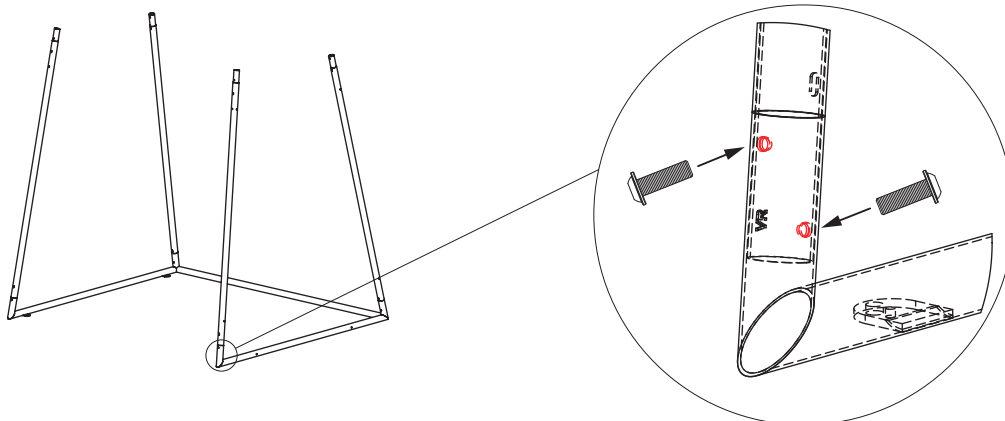


3. Now screw in 1 screw from each side through the holes in the struts into the threads of the struts (4 x 2 screws).
Do not tighten them completely yet.


8 (M6 x 16)

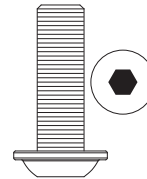

4. Now tilt the frame assembly backwards. Use a suitable support to avoid damaging the frame and the floor.

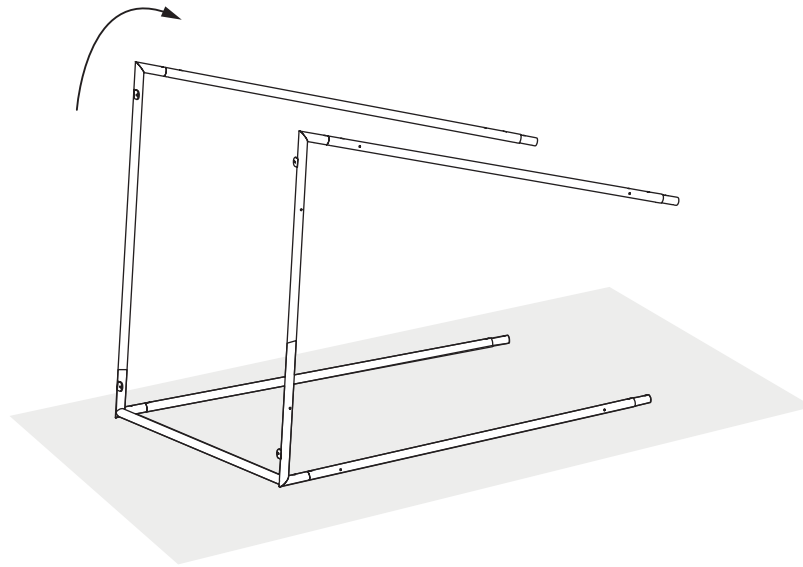

5. Now put on the roof by pushing the respective pipe sockets of the roof frame onto the struts. Make sure that the smaller distance between the swing crossbar and the frame (A) is at the front.

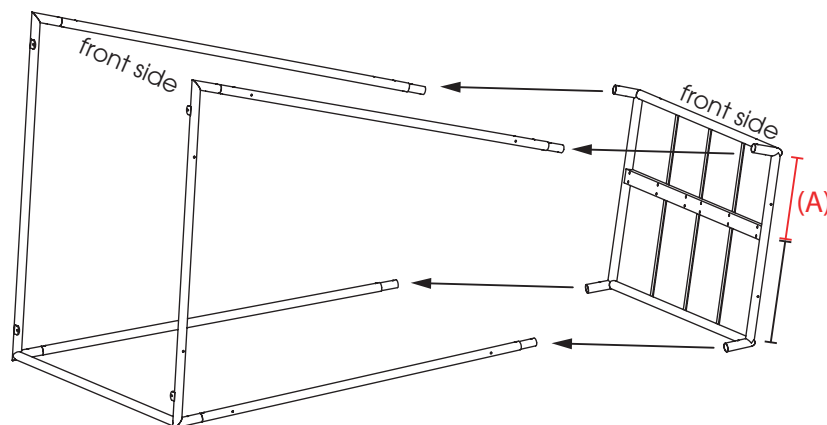


6. First screw the roof frame hand-tight to the 4 struts.


7. Info: Adjustable feet are already pre-assembled. These can usually be adjusted to compensate for uneven floors. First turn them to the highest position (all the way down).

Unscrew the adjustable feet for the moment


Screwing the roof frame

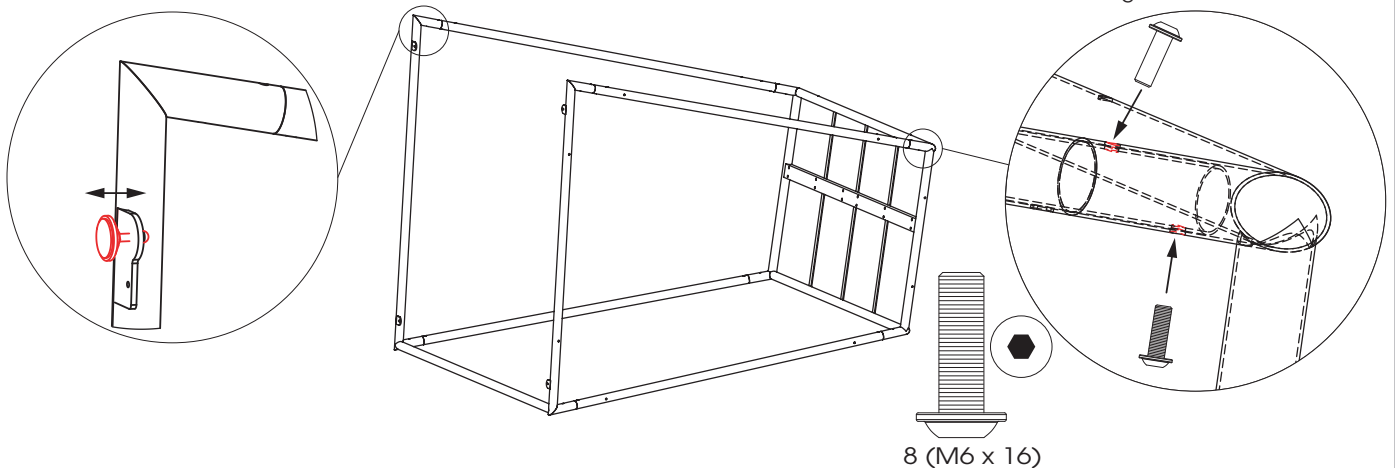

8. Now set the frame upright again.







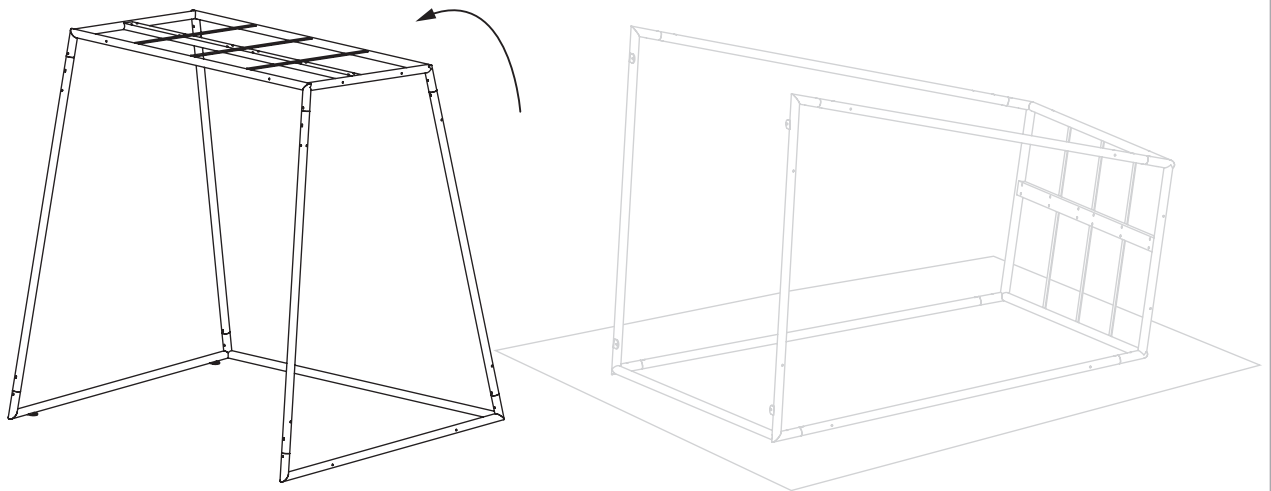


9. Mount the stiffeners. Screw them (14 pieces) hand-tight to the frame with 2 screws each.

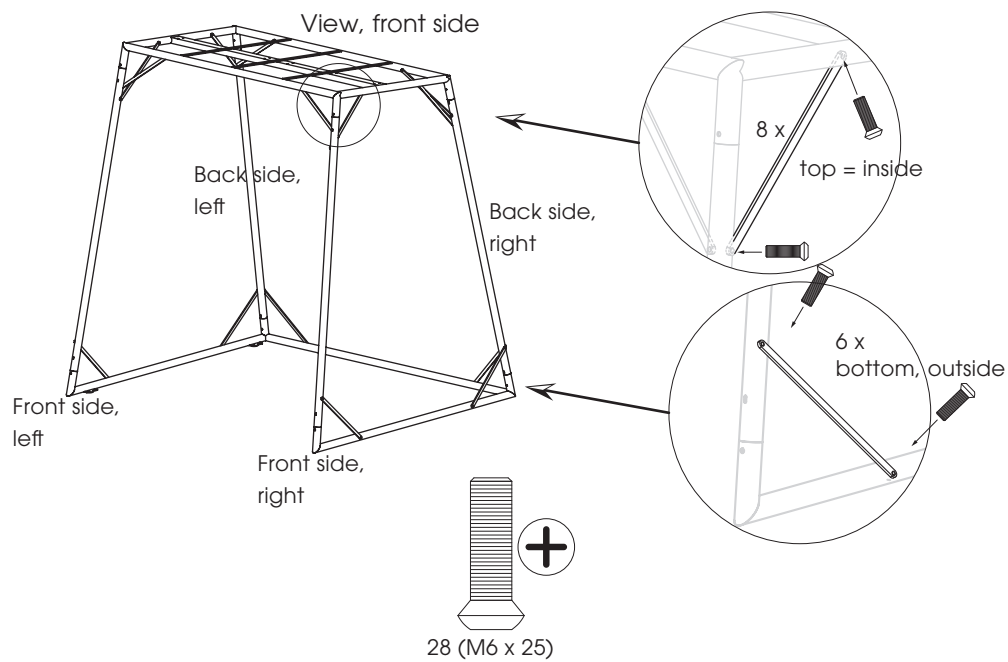




When all stiffeners are in place, all screws must be tightened in assembly order.

Assembly, rocking joint (left/right) for functional armchair OD ROCKfrog 180F/181F/182F/183F:

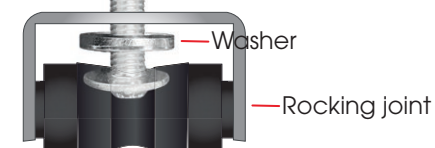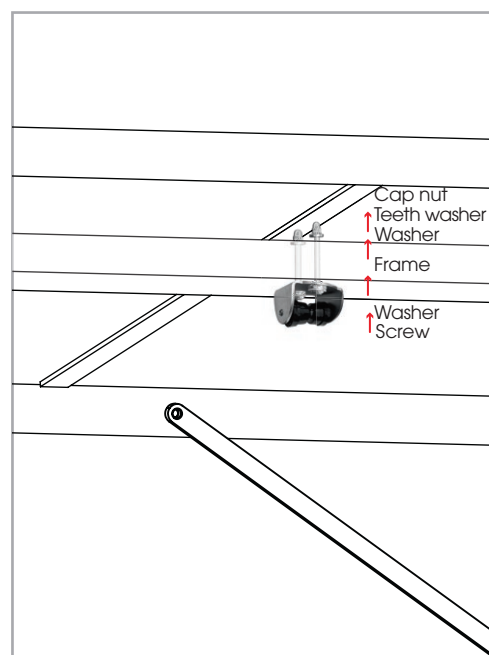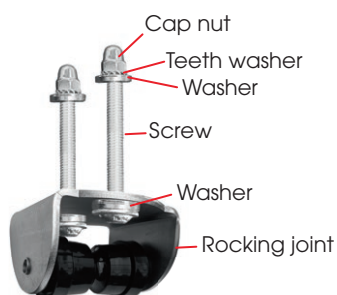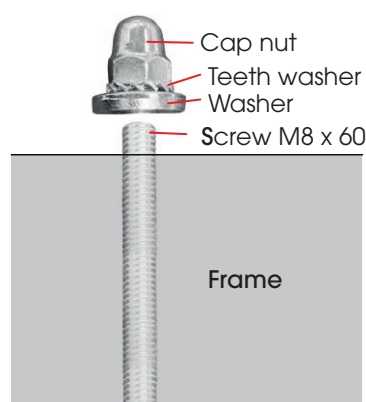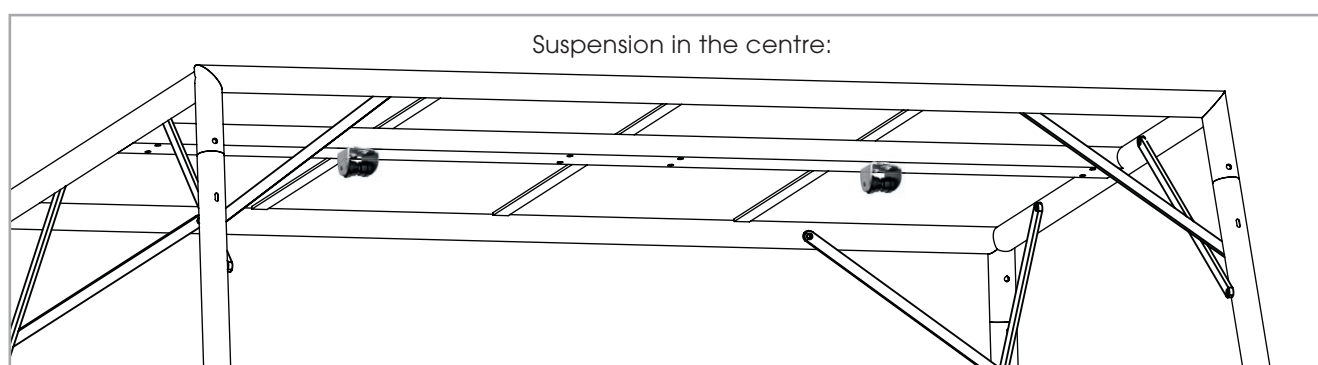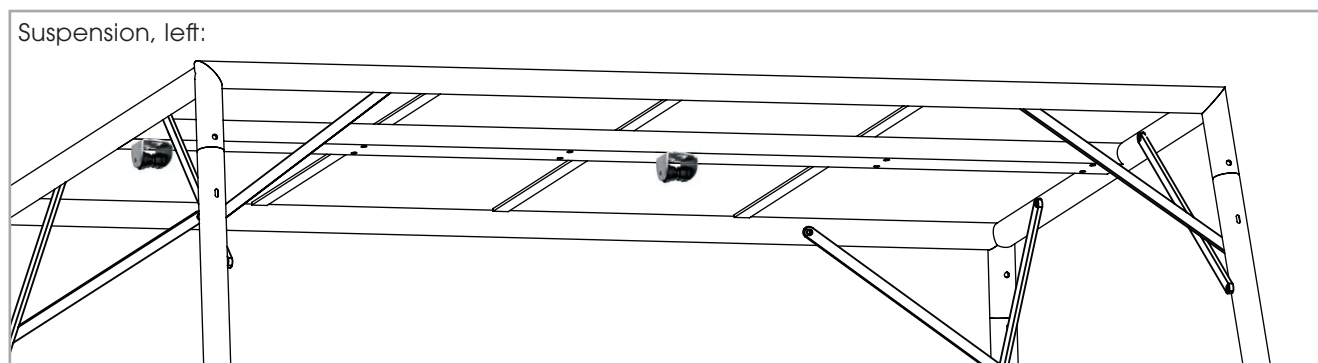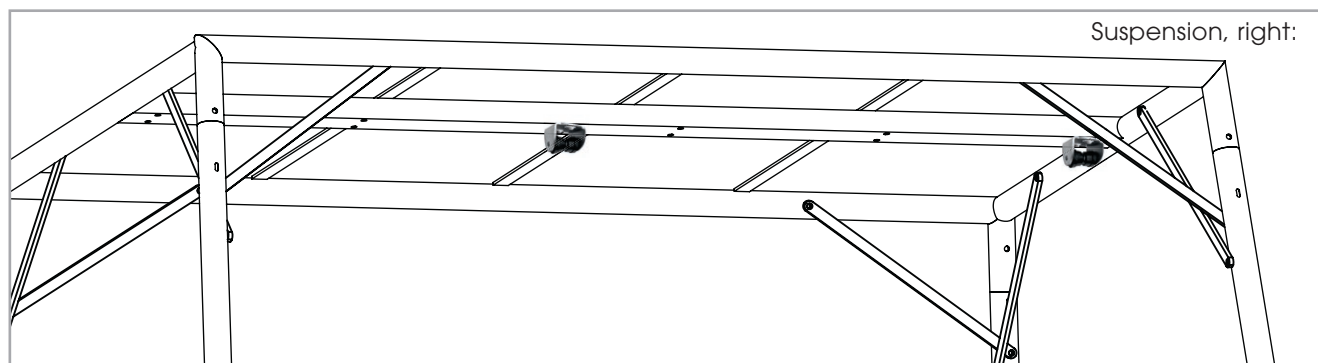

Screw both rocking joints into the frame at the desired position. Use 2 screws (M8 x 60) each side. Observe the sequence.

Assembly, rocking joint (left/right) for functional sofa OD0821 ROCKfrog 200F/230F and model OD2210 Mon Amour:

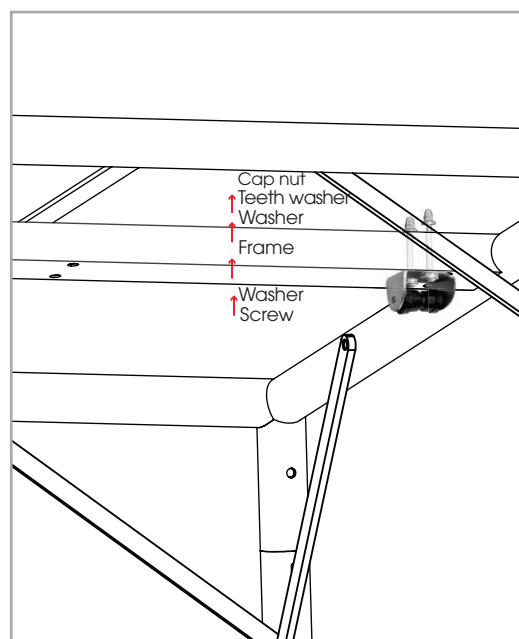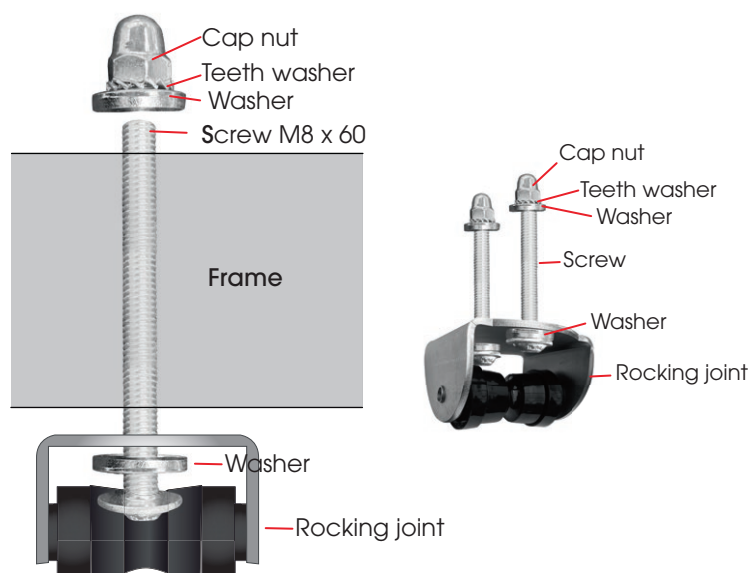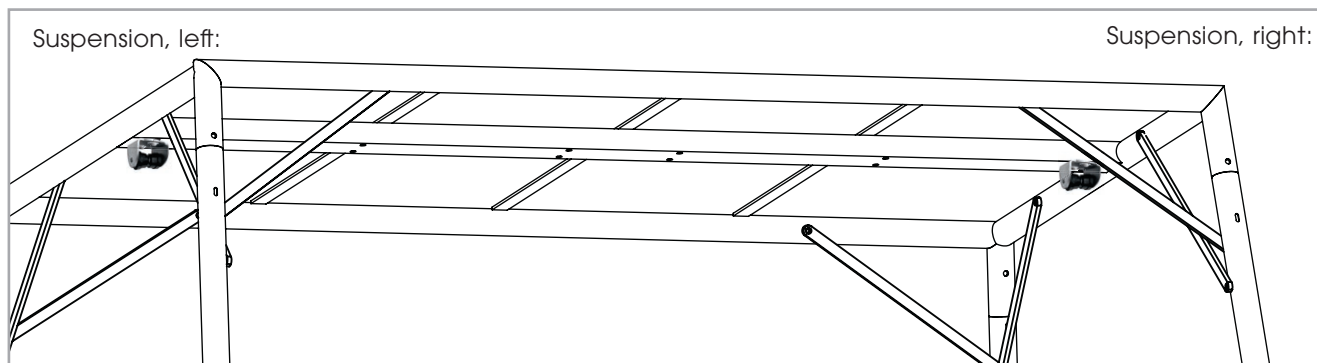

Screw both rocking joints into the frame at the shown position. Use 2 screws (M8 x 60) each side. Observe the sequence.